


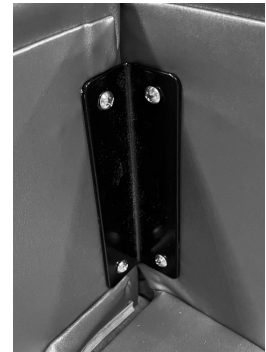

www.blendhomefurnishings.com
116 Locust Ave. Ste. D | Cookeville, TN 38501
800-590-8978

REFLECTION BED ASSEMBLY INSTRUCTIONS

1. Locate the side rails with the L-brace hardware attached. Remove the screws from the foot rail and/or headboard.
2. Line up the corner brace holes to the holes on the foot rail and/or headboard. Securely drill the two bolts into the holes.
3. Repeat this step for each corner.



To install the plinth base:

4. Place constructed rails on top of the plinth base.
5. Attach plinth to rails with bent mending brackets; 2 brackets per rail (as shown at right).
6. Follow the instructions included in the metal bed support kit.
7. Once assembled, place the three metal supports across the width of the bed frame approximately 24" apart.
8. When the metal support slats are in place, drill the metal slats to the inside ledge of the bed rails.
9. Lastly, place the two-part upholstered wooden base or box spring on top of the metal support slats.

